



OPENING EXIT PANEL - DIA. 1

Remove EXIT panel from the housing by pulling carefully at the top of the EXIT panel

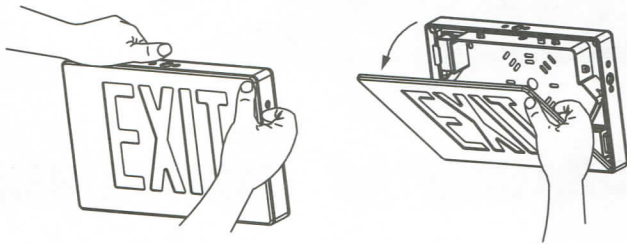

ASSEMBLING EXIT PANEL TO HOUSING - DIA. 2

Snap EXIT panel to the housing bottom first and then top

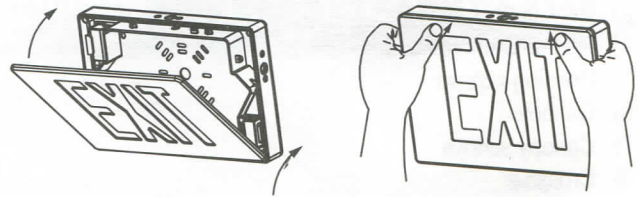


USING HOLDING WIRE - DIA. 3


Holding wire supports sign during wiring

PARTS DESCRIPTION

- 6) Canopy
- 8) Crossbar
- 10) Junction box (Building utility)
- 11) Holding wire
- 12) Crossbar screws (not provided)

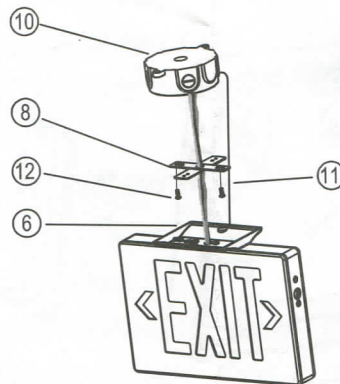


WIRING

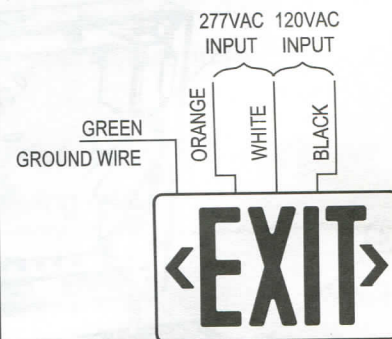


CEILING MOUNTING - DIA.4

- 1) Housing
- 2) EXIT panel
- 3) Back plate
- 4) Red or Green diffuser
- 5) Housing screws
- 6) Canopy
- 7) Canopy screws
- 8) Crossbar
- 9) Wire nuts
- 10) Junction box (Building utility)
- 12) Crossbar screws (not provided)

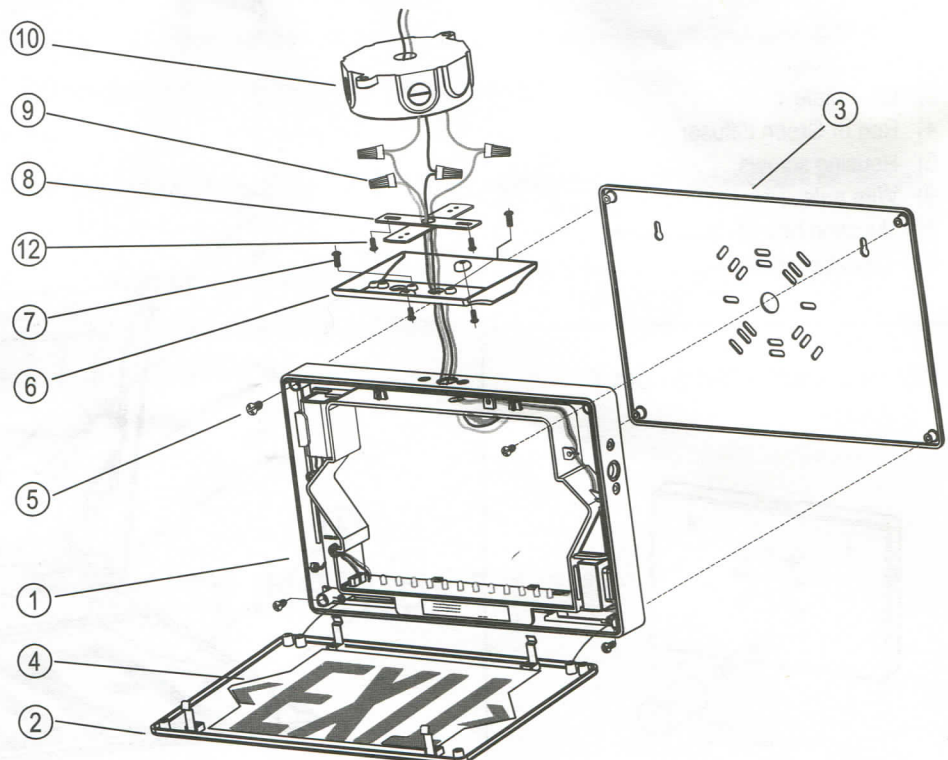


SIDE MOUNTING - DIA.5

- 1) Housing
- 2) EXIT panel
- 3) Back plate
- 4) Red or Green diffuser
- 5) Housing screws
- 6) Canopy
- 7) Canopy screws
- 8) Crossbar
- 9) Wire nuts
- 10) Junction box (Building utility)
- 12) Crossbar screws (not provided)

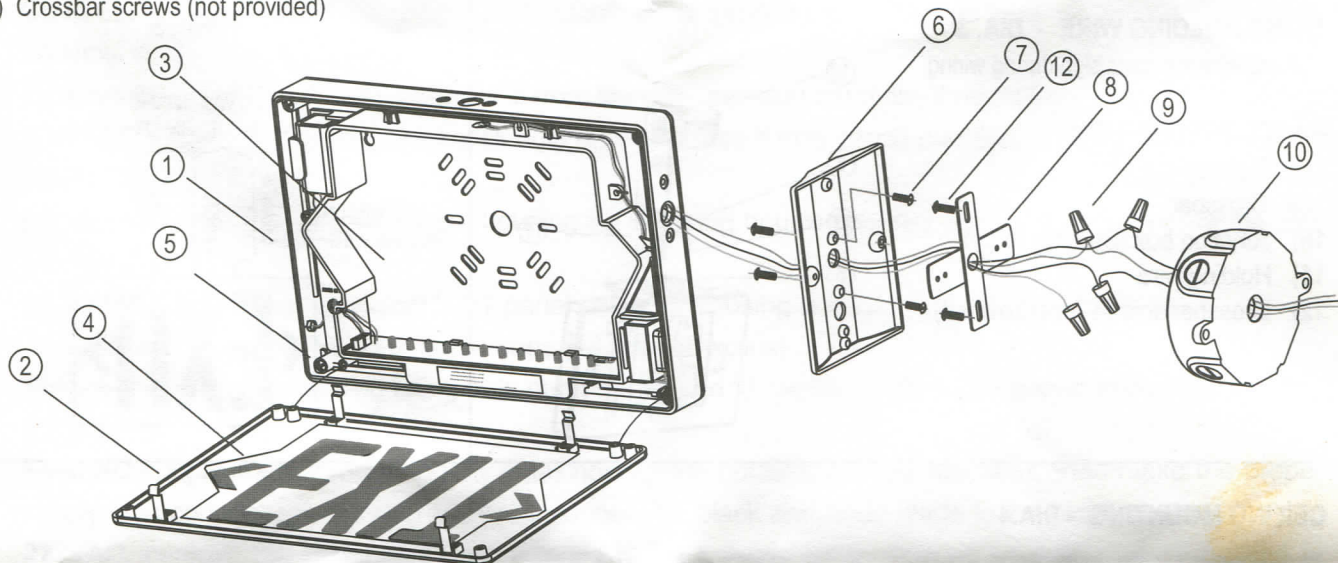


BACK MOUNTING - DIA.6

- 1) Housing
- 2) EXIT panel
- 3) Back plate
- 4) Red or Green diffuser
- 5) Housing screws
- 9) Wire nuts
- 10) Junction box (Building utility)
- 12) Crossbar screws (not provided)

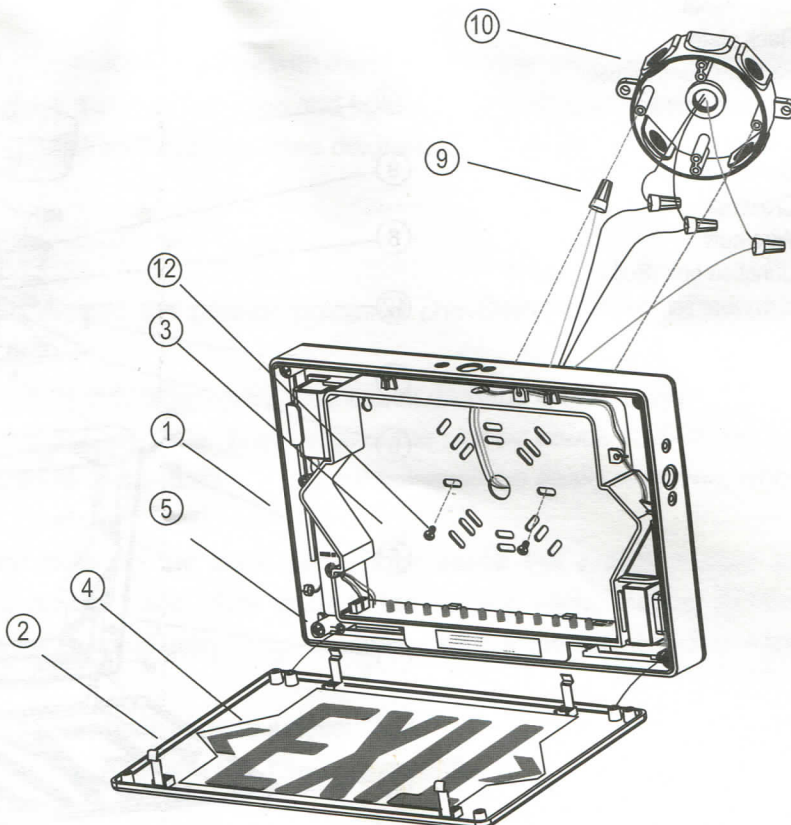


REMOVE KNOCKOUTS - DIA.7

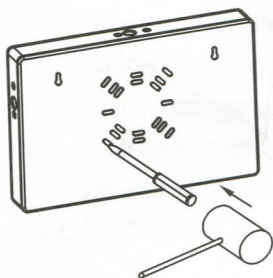


OPENING EXIT PANEL - DIA. 1

Remove EXIT panel from the housing by pulling carefully at the top of the EXIT panel

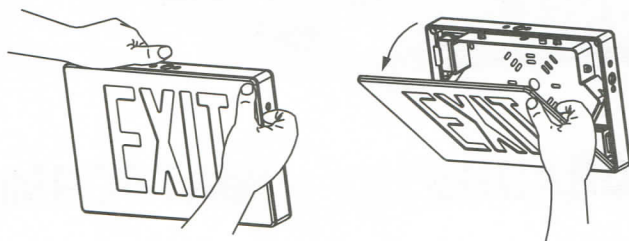

ASSEMBLING EXIT PANEL TO HOUSING - DIA. 2

Snap EXIT panel to the housing bottom first and then top

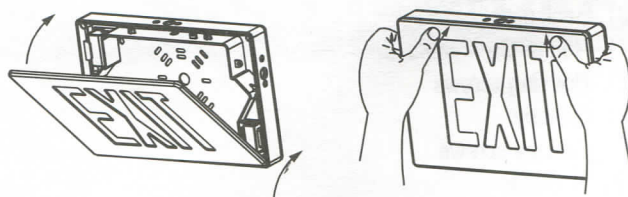


USING HOLDING WIRE - DIA. 3


Holding wire supports sign during wiring

PARTS DESCRIPTION

- 6) Canopy
- 8) Crossbar
- 10) Junction box (Building utility)
- 11) Holding wire
- 12) Crossbar screws (not provided)

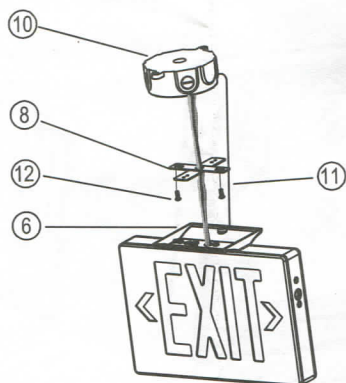

WIRING

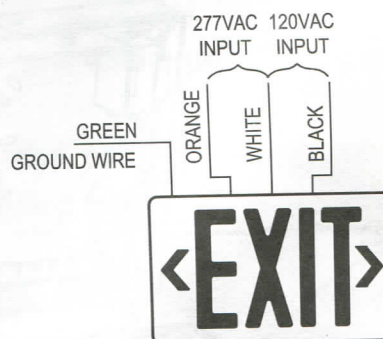

CEILING MOUNTING - DIA.4

- 1) Housing
- 2) EXIT panel
- 3) Back plate
- 4) Red or Green diffuser
- 5) Housing screws
- 6) Canopy
- 7) Canopy screws
- 8) Crossbar
- 9) Wire nuts
- 10) Junction box (Building utility)
- 12) Crossbar screws (not provided)

