PHILIPS bodine

Emergency Ballasts

Linear Fluorescent

B30ST



Project:	
Туре:	
Model No:	Qty:
Date:	
Notes:	

Automatic Code-Compliant Testing **High Lumen Output** AC/DC Output for T5 or T8 lamps Universal Input (120 through 277)

Product order number: B30ST (galvanized metal case)

Specifications

UL LISTED For US and Canada Factory or Field Installation (Indoor and Damp)

Illumination Time 90 Minutes

Initial Light Output 900 - 3500 Lumens

Full Warranty 5 Years (NOT pro-rata)

Universal Input Voltage 120-277 VAC, 50/60 Hz

AC Input Current 110 mA

AC Input Power Rating 8.5 Watts

Test Switch Two-Wire Illuminated Test Switch (2W-ITS)

Battery

High-Temperature, Maintenance-Free Nickel-Cadmium Battery 7- to 10-Year Life Expectancy

Battery Charging Current 280 mA

Recharge Time 24 Hours

Charging Indicator Light LED

Temperature Rating (Ambient) 0°C to +50°C (32°F to 122°F)

Dimensions

16.6" x 2.8" x 2.85" (422 mm x 71 mm x 73 mm) 2' (610 mm) Flexible Conduit Mounting Center 16.05" (408mm)

Weight


7.5 lbs. (3.41 kg)


Benefits:

- Automatic code-compliant testing 30 mins monthly, 90 mins annually
- Emergency mode lumen output up to 3500 lumens
- AC or DC output for T5 or T8 lamps
- Compatible with TLED lamps (see chart on page 2)
- One- or Two-lamp operation
- Universal input (120 through 277 VAC 50/60 Hz)
- End-of-Lamp Life Compatible
- Two-wire illuminated test switch

Dimensions

16.6" x 2.8" x 2.85" (mounting center - 16.05")

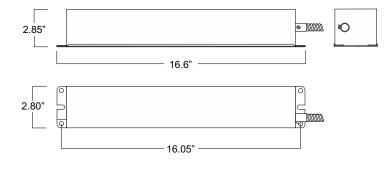



An illuminated test switch/charging indicator light is provided.



Flourescent Emergency Ballast, Self-Testing, Full Lumen Output

Table 1 Lamp Compatibility

LAMP DIAMETER (T5, T8, T9, T10, T12)	BASE	WATTAGE (Length)	NO. of LAMPS (EMERGENCY)	BROWN CONNECTOR	VIOLET CONNECTOR
1", 11/4", 11/2" (T8, T9, T10, T12)	Single or Bipin	17 - 40 W (2' - 4')	1	CLOSED	OPEN
			2	OPEN	CLOSED
		40 - 215 W (5' -8')	1	OPEN	CLOSED
Long Compact	4-PIN (2G11)	18 - 55 W	1	CLOSED	OPEN
Twin/Quad/Triple Twin-Tube Compact	4-PIN (G24q, GX24q)	18 - 42 W	1	CLOSED	OPEN
Philips InstantFit LED T8	Bipin	8.5 - 16.5W (2'-4')	1	CLOSED	OPEN
Philips InstantFit LED T8 U Bend 6"	Bipin	16.5W	1	CLOSED	OPEN
Philips InstantFit LED Twin-Tube Compact	4-PIN	16.5W 22"	1	CLOSED	OPEN
2D	4-PIN (GR10q)	16 - 55 W	1	CLOSED	OPEN
т5 но	HO Circline 4-PIN (2GX13)	22 - 55 W	1	CLOSED	OPEN
	Miniature Bipin	24 - 54W (2' - 4')	1	CLOSED	OPEN
T5	Miniature Bipin	14 - 35W (2' - 5')	1	CLOSED	OPEN

Table 2 Lumen Output

	LUI	LUMENS		
LAMP	1 Lamp	2 Lamps		
F14T5/HE	1630			
F21T5/HE	2421			
F28T5/HE	2400			
F35T5/HE	3000			
F39T5/HO	3000			
F49T5/HO	2700			
F54T5/HO	3000			
TL5C22W/840 Circline	2800			
TL5C40W Circline	2900			
FC12T5 55W Circline	3300			
F17T8	2050	1814		
F25T8	2800	2721		
F32T8	2420	3470		
F40T8	3232			
F96T12/D/HO-O 110W	2098			
PL-L 24W	1936			
PL-L 36W	2013			
PL-L 40W	2658			
PL-L 55W	2834			
PL-T 18W	1295			
PL-T 26W	1670			
PL-T 42W	2395			
PL-Q (2D) 28W	1695			
PL-Q (2D) 38W	1995			
TLED T8 8.5W	886			
TLED T8 16.5W	1347			
TLED U T8 16.5W	1935			

APPLICATION

The B3OST emergency ballast works in conjunction with an AC ballast to convert new or existing fluorescent fixtures into emergency lighting. The emergency ballast consists of a high-temperature nickel-cadmium battery, charger and electronic circuitry in one case. The B30ST can be used with most 17 - 215 W (2' - 8') T5, T8, T9, T10 or T12 fluorescent lamps without integral starters, including U-shaped, HO, VHO, circline, energy-saving and rapid-start (4-pin) compact fluorescent lamps. B30ST also operates Philips InstantFit LED 2' to 4' 8.5 W - 16.5 W T8 and InstantFit LED U Bend 6" 16.5 W T8 lamps. One- or two-lamp operation may be selected for some lamps (see Table 1). It is also compatible with most one-, two-, three- and four-lamp electronic, standard, energy-saving and dimming AC ballasts. If used in an emergency-only fixture, no AC ballast is necessary. The B30ST is suitable for indoor and damp locations. It is not suitable for air handling heated air outlets or wet or hazardous locations. For information about specific lamp and ballast compatibility, please call the factory.

OPERATION

During normal operation, the B3OST constantly monitors charging current and battery voltage. When AC power fails, the B3OST immediately switches to the emergency mode, operating either one or two lamps at high lumen output for a minimum of 90 minutes. When AC power is restored, the emergency ballast automatically returns to the charging mode and,delays AC ballast operation for approximately three seconds to prevent false tripping of the AC ballast end-oflamp-life shutdown circuits. During automated testing, the B3OST simulates an AC power failure, causing the emergency ballast to switch to emergency mode and conduct a discharge test to monitor battery voltage and discharge current. If the B305T detects a problem, the status indicator light flashes. When testing is complete, the B30ST returns to the charging mode. The B30ST automatically tests emergency lighting for 30 seconds every 28 days and 90 minutes once a year.

INSTALLATION

The B30ST does not affect normal fixture operation and may be used with either a switched or unswitched fixture. If a switched fixture is used, an unswitched hot must be connected to the emergency ballast. The emergency ballast must be fed from the same branch circuit as the AC ballast. The B30ST may be installed on top of or remote from the fixture. The emergency ballast may be remotely installed up to half the distance the AC ballast from the lamp or up to 50 feet, whichever is less. Installation is not recommended with fixtures where the ambient temperature may fall below 0°C. A 2-wire illuminated test switch is provided.

EMERGENCY ILLUMINATION

Depending on the number (one or two), wattage and type of lamps selected, the B3OST produces 900 to 3500 lumens initial emergency light output (see Table 2). If two-lamp operation is selected, light output is evenly divided between the lamps for better distribution of emergency illumination.

SPECIFICATION

Emergency lighting shall be provided by using a standard fluorescent fixture equipped with a Philips Bodine B30ST self-testing/self-diagnostic emergency Partial listing of lamps operated

ballast. Electronic circuitry shall be self-testing in design and automatically test emergency lighting for a minimum of 30 seconds every 28 days and 90 minutes once a vear. An embedded microcontroller will continuously monitor the battery charging current and voltage. The emergency lighting equipment, shall delay AC ballast operation for approximately three (3) seconds to prevent false tripping of AC ballast end-of-lamp-life shutdown circuits. The B30ST shall consist of a high-temperature. maintenance-free nickel-cadmium battery, charger and electronic circuitry contained in one 16.6" x 2.8" x 2.85" metal case with a 2' length of flexible conduit. A solid-state status indicator light to monitor the charger and battery and to indicate test results and status conditions; a single-pole test switch; and installation hardware shall be provided. A test/monitor plate is available to oder upon request. The emergency ballast shall be capable of operating [one or two] fluorescent lamp(s) (see Table 1) at _ lumens (see Table 2) initial light output in the emergency mode for a minimum of 90 minutes. It shall be suitable for indoor and damp locations. The B30ST shall have 8.5 Watts of input power and a 57.6 Watt-hour battery capacity and shall exceed emergency standards set forth by the current NEC. The emergency ballast shall be UL Listed for installation on top of or remote from the fixture.

WARRANTY

Model B30ST is warranted for five (5) full years from date of purchase. Please see detailed warranty information on our web site..

© 2016 Philips Lighting Holding B.V. All rights reserved. Philips reserves the right to make changes in specifications and/or to discontinue any product at any time without noticeor obligation and will not be liable for any consequencesresulting from the use of this publication.

Document order number: L2300237 15.05



Philips Emergency Lighting 236 Mt. Pleasant Rd. Collierville, TN 38017 Tech Support: 888.263.4638 Sales: 800.223.5728

philips.com/bodine